

# REDMOND

MultiBaker RMB-M603

Over 40 removable  
plates in stock

 


User manual




# CONTENTS

|   |    |
|---|----|
| IMPORTANT SAFEGUARDS.....                             | 8  |
| Technical Specifications.....                         | 10 |
| Package Includes .....                                | 10 |
| Parts of Appliance.....                               | 11 |
| I. PRIOR TO FIRST USE .....                           | 11 |
| II. OPERATION.....                                    | 11 |
| Replacement of the removable metal plates .....       | 11 |
| Use of the appliance .....                            | 12 |
| III. COOKING TIPS.....                                | 12 |
| Common Cooking Mistakes and Ways of Solving Them..... | 12 |
| IV. CLEANING AND MAINTENANCE .....                    | 13 |
| Storage and transportation .....                      | 14 |
| V. ADDITIONAL ACCESSORIES .....                       | 14 |
| VI. BEFORE CONTACTING SERVICE CENTER .....            | 14 |


A1

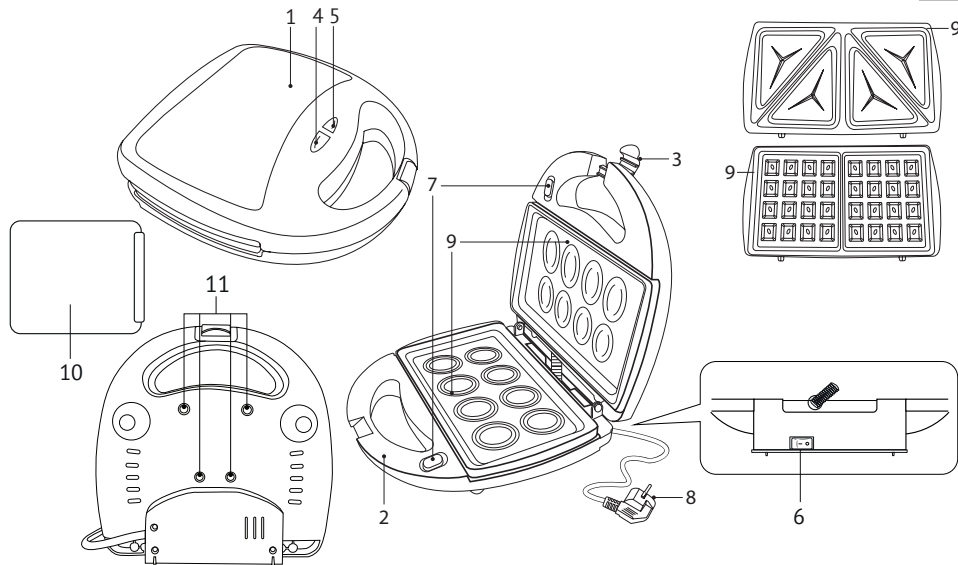


A2

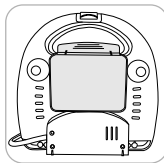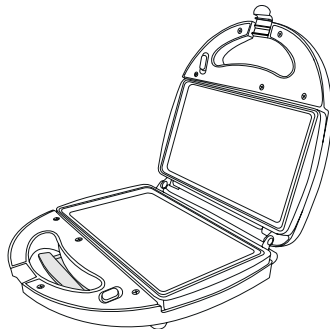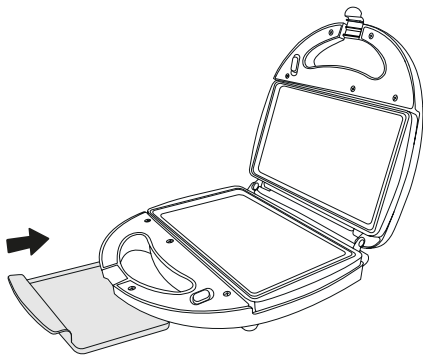   


**RAMB-01**

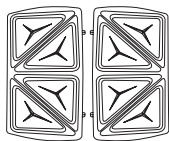 


**RAMB-02**

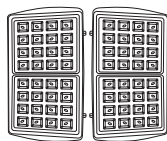 


**RAMB-03**

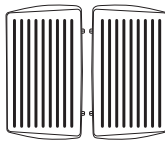 


**RAMB-04**

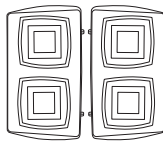 


**RAMB-05**

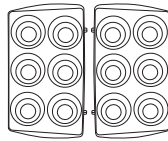 


**RAMB-06**

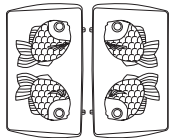 


**RAMB-07**

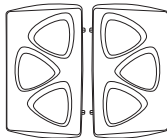 


**RAMB-08**

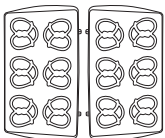 


**RAMB-09**

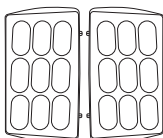 


**RAMB-10**

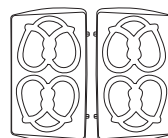 


**RAMB-11**

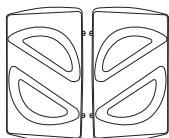 


**RAMB-12**

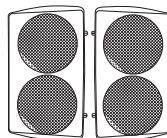 


**RAMB-13**

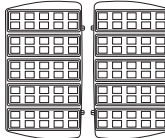 

**RAMB-14**

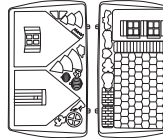 


**RAMB-15**

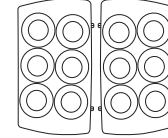 


# A3

 
RAMB-16

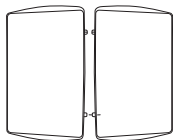


RAMB-17

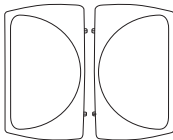 


RAMB-18

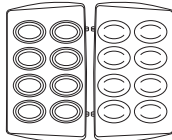 


RAMB-19

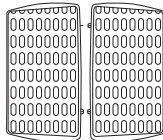 


RAMB-20

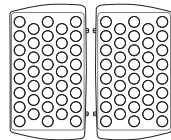 


RAMB-21

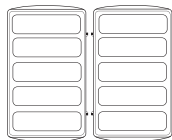 


RAMB-22

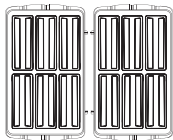 


RAMB-23

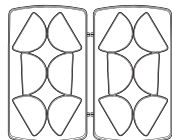 


RAMB-24

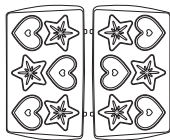 


RAMB-25

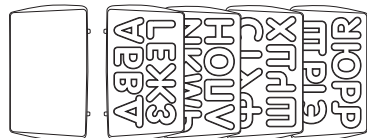 


RAMB-26

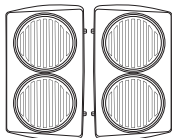 


RAMB-27

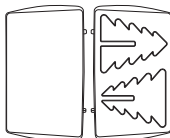 


RAMB-28

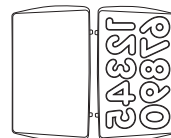 


RAMB-29

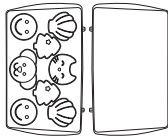 


RAMB-30

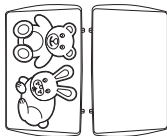 


RAMB-31

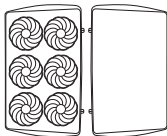 


RAMB-32

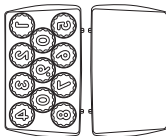 


RAMB-33

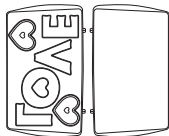 


RAMB-34

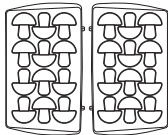 


RAMB-35

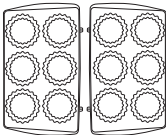 


RAMB-36

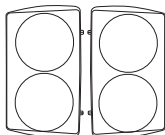 

RAMB-38

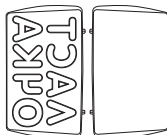 


RAMB-40

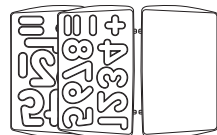 

RAMB-42



 RAMB-44

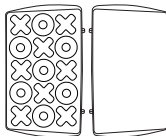



*Read the user manual carefully and keep it as a reference book. Proper use of the appliance will significantly prolong its life.*

**The safety measures and instructions contained in this manual do not cover all possible situations that may arise during the operation of the appliance. When operating the device the user should be guided by common sense, be cautious and attentive.**

### IMPORTANT SAFEGUARDS

- The manufacturer is not responsible for any failures arising from the use of this product in a manner inconsistent with the technical or safety standards.
- This appliance is intended to be used for non-industrial use in household and similar spheres of application. Industrial application or any other misuse will be regarded as violation of proper service conditions. Should this happen, manufacturer is not responsible for possible consequences.
- Before installing the appliance, check that the device voltage corresponds with the supply voltage in your home (refer to rating plate or technical data).
- While using the extension cord, make sure that its voltage is the same as specified on the device. Using different voltage may result in a fire or other accident, causing appliance damage or short circuit.
- Use only earthed electric sockets as this is an obligatory safety requirement. Use an earthed extension cord as well.
- Metal parts of the appliance are heated during operation. Do not touch them with your hands when the device is connected to a power outlet. Do not switch on the empty appliance. Never touch the inner surfaces of the heated appliance.
- Bread can burn that's why the appliance should not be used close to or under flammable materials, e.g. curtains.
- Always unplug the device after use, before cleaning or moving. Never handle the plug with wet hands. Do not pull the power cord to disconnect from the outlet; instead, grasp the plug and pull to disconnect
- Keep the power cord away from hot surfaces (gas or electric ovens) or sharp edges. Do not let the cord hang over edge of a table or a counter.



**STOP** *REMEMBER: damaging the cord may lead to a failure that will not be covered by the warranty. If the power cord is damaged, it must be replaced by the manufacturer, after-sales service or similar qualified personnel to avoid possible danger.*

- Do not leave the product unattended while it is in use. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

The appliance can be used only with the closed lid.

- Do not cover the appliance during operation. It may lead to overheating and breakage of the appliance.
- Do not operate the appliance outdoors, to prevent water or any foreign object or insect from getting into the device. Doing so may result in serious damage of the appliance.

**STOP** *CAUTION! Do not allow liquid ingredients and food particles to get between the removable panels and the base to avoid incorrect operation of the appliance and foreign odour occurrence during operation.*

- Always unplug the device and let it cool down before cleaning. Follow cleaning and general maintenance guidelines when cleaning the unit.

**STOP** *DO NOT immerse the device in water or wash it under running water! If the product falls into water, immediately unplug it from the electrical outlet. Do not touch or reach into the water.*

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of

children aged less than 8 years. Cleaning and user maintenance shall not be made by children without supervision.

- Keep the packaging (film, foam plastic and other) out of reach of children as they may choke on them.
- No modifications or adjustments to the product are allowed. All the repairs should be carried out by an authorized service center. Failure to do so may result in device and property damage or injury.



**CAUTION!** Do not use the appliance in case of any malfunctions.



**CAUTION!** Hot surface.

### Technical Specifications

|                                     |                     |
|-------------------------------------|---------------------|
| Model.....                          | RMB-M603            |
| Rated power .....                   | 700 W               |
| Voltage .....                       | 220–240 V, 50/60 Hz |
| Electrical safety .....             | class I             |
| Number of removable plate sets..... | 3                   |
| Housing material .....              | bakelite + metal    |
| Material of removable plate.....    | metal               |
| Operation indicator .....           | available           |
| Power indicator .....               | available           |
| Overall dimensions .....            | 240 × 231 × 97 mm   |
| Net weight .....                    | 1,99 kg             |
| Power cord length .....             | 0,8 m               |

### Package Includes

|   |       |
|---|-------|
| Multibaker.....                           | 1 pc. |
| The set of removable plates RAMB-01 ..... | 1 pc. |
| The set of removable plates RAMB-02 ..... | 1 pc. |
| The set of removable plates RAMB-18 ..... | 1 pc. |
| Drip tray to collect oil/grease .....     | 1 pc. |
| Cookbook.....                             | 1 pc. |
| User manual .....                         | 1 pc. |
| Service booklet.....                      | 1 pc. |

Manufacturer reserves the right to make any modifications to design, packaging, or technical specifications of the product without prior notice. The specification allows an error of ±10%.

### Parts of Appliance (figure A1, p. 3)

1. Appliance housing
2. Handles
3. Lid lock
4. Power indicator
5. Operation indicator
6. I/O power switch
7. Buttons for fixing removable panels
8. Power cord
9. Removable plate sets
10. Drip tray to collect oil/grease
11. Trench drain with oil/grease

## I. PRIOR TO FIRST USE

Carefully remove the unit and its accessories from the packaging. Dispose of all packaging materials and promotional stickers.


 *Keep all warning labels, warning stickers (if any), and the serial number identification label located on the housing.*

*After transportation or storage at low temperatures allow the appliance to stay at room temperature for at least 2 hours before use.*

Completely unwind the power cord. Wipe the unit with a moist cloth. Rinse removable parts with warm soapy water and dry thoroughly before connecting the appliance to an electrical outlet. Place the device on a flat, stable, and hard surface away from any objects

or cabinets that could be damaged by steam, humidity, or high temperatures.

Ensure that outer and visible inner parts of the appliance are not damaged, do not have chips and other defects.

 *Before using the appliance as intended, perform the heating cycle with the empty multibaker (having preliminarily fixed the working plates) to remove technical protective oil. Then unplug the appliance, let cool down and clean according to section "Cleaning and maintenance".*

*This process should be performed for each set of the removable plates.*

## II. OPERATION

 **WARNING!** *Parts of the device may become extremely hot when operating. Keep out of reach of children.*

### Replacement of the removable metal plates

1. Open the main lid.
2. Push back the plate lock on the housing of the appliance and remove the metal plate. Repeat the action with other plate.
3. Push the lock back and install the selected plate into the device so that the projections on it aligned with the slots on the housing. Release the lock. Repeat the action with other plate.


**NOTE!** *Be sure to push the lock back before installing the removable plate, do not press on it! Installing the plate forcefully can lead to lock breakage!*

**STOP** *DO NOT* replace the metal plates if the appliance is plugged in.

### Use of the appliance

**STOP** *The device must not be used without the plates installed.*

1. Plug in the appliance.
2. Turn the O/I switch to the I position. The power indicator light will turn on. When the device reaches the required temperature, the operation indicator light will turn on.

 *To get the best result possible, place food inside when the operation indicator light will switched on!*

*Food must be frozen.*

*Do not use products that contain a large amount of water, remove any excess moisture before cooking. A large amount of water being released from the product may lead to overheating and device failure.*

3. Open the lid of the appliance. Depending on the type of adjusted plates put ingredients onto the lower heating surface. Ensure the plates are not overfilled.

**i** *Non-stick plate coating allows to cook without oil. However, you may apply a small amount of vegetable oil or butter to plate working surface if desired.*

4. Place the oil & fat collection tray under the multibaker as shown in diagram **A2**, page 4.
5. Press products with the upper plate until the lid lock mechanism clicks.

*For your convenience, the appliance is equipped with a two-level lock that allows you to vary thickness of the product.*

**NOTE!** *Do not apply too much force, it may lead to breakage! If the size of the product exceeds the capacity of the plates, reduce the serving.*

6. The operation indicator will be occasionally lit up during cooking. The cooking time is defined by the type of product and your taste.

*When cooking some food, residues of fat / oil or liquid ingredients may leak underneath the appliance panels. This is not a malfunction. If this happens, place a paper towel under the access holes in the lower part of the device.*

7. Open the lid of the appliance after a while. Remove the ready dish using wooden or silicone paddles.
8. When you finish cooking, turn the power switch on the base to the "O" position and unplug the appliance from the mains. Clean the appliance according to recommendations of the section "Cleaning and maintenance".

## III. COOKING TIPS

### Common Cooking Mistakes and Ways of Solving Them

This table familiarizes you with the practical tips and solutions to some common problems you may experience when using the multibakers.

### THE TOP OF THE PRODUCT IS BAKED THROUGH WORSE THAN ITS BOTTOM

| Possible causes                          | Solutions  |
|--|--|
| The product has been laid for too long   | For uniform baking on both sides add the products quickly and immediately close the multibaker |
| The multibaker was opened during cooking | Do not open the lid of the appliance while cooking earlier than recommended                    |
| Not enough ingredients                   | Add more   |
| Pastry prepared incorrectly              | Follow cooking recommendations   |

### THE DISH IS UNDERCOOKED

|   |  |
|---|--|
| The dish is cooked with the open lid            | Cook with the closed lid                 |
| The product has been placed onto the cold plate | Put the product onto the preheated plate |
| The cooking time is not followed                | Follow the cooking recommendations       |

### THE DISH GETS BURNT

|  |  |
|--|--|
| The product doesn't have oil. The plate was not greased with oil | Grease the product or plate with oil       |
| Cooking recommendations haven't been followed                    | Follow the recommendations on cooking time |

### THE PRODUCT GETS DRY

|   |  |
|---|--|
| The product doesn't have oil. Cooking with the open lid without oil | Grease the product or plate with oil. Cook with the closed lid |
|---|--|

|   |  |
|---|--|
| Cooking time is too long                        | Follow the recommendations on cooking time |
| The product has been placed onto the cold plate | Put the product onto the preheated plate   |

### THE PRODUCT STICKS

|  |  |
|--|--|
| The vegetables are cut or placed onto the cold plate. Long cooking without oil                             | Follow the cooking recommendations. Preheat the plate and add the product greased with oil |
| The meat has been placed onto the overheated plate without oil (the marinade for meat doesn't contain oil) |  |
| The fish has been put onto the overheated/cold plate without oil   |  |

### THE PRODUCT LEAKS OUT

|  |  |
|--|--|
| Too much liquid product has been placed onto the plate | Reduce the batch of the product. Change the consistence (make the product thicker) |
|--|--|

## IV. CLEANING AND MAINTENANCE

Wipe the housing of the appliance with a damp soft cloth, ensure the moist doesn't get inside the appliance

*DO NOT use coarse tissues or sponges, abrasive pastes for cleaning. It is also not recommended to use any chemically aggressive or other substances, not recommended for use with items which contact with food.*

*DO NOT immerse the housing and power cord into water or rinse it under running water.*

During the cooking process, fat and oil drain through special grooves in the panels into the collection tray. Wash the removable metal plates with warm soapy water after each use. Do not wash metal plates in a dishwashing machine.

## Storage and transportation

Before repeated operation or storage completely dry all parts of the appliance. Store the assembled appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, do not expose the device to mechanical stress, that may lead to damage of the device and/or violation of the package integrity.

Keep the device package away from water and other liquids.

## V. ADDITIONAL ACCESSORIES

You can purchase additional removable plates for the multibaker RMB-M603 and find out about REDMOND products at [www.redmond.com](http://www.redmond.com) company or at the authorized dealers' shops (scheme A3, p. 5-7).

## VI. BEFORE CONTACTING SERVICE CENTER

| Problem  | Possible cause                            | Solution                                      |
|--|---|---|
| Indicators are not lit up, plates are not heated | Electrical outlet is not working properly | Connect to properly working electrical outlet |

| Problem  | Possible cause  | Solution   |
|--|---|--|
| Indicators are not lit up, plates are not heated | Power cord is not connected to an electrical outlet         | Connect the power cord to an electrical outlet                                 |
|  | Electrical outlet is not working properly                   | Connect to properly working electrical outlet                                  |
| An off-odour appeared during operation           | The appliance overheats during operation                    | Reduce the time of continuous operation, increase the intervals between starts |
|  | Appliance is new, the smell is coming from protective cover | Thoroughly clean the appliance. The smell will disappear after few uses        |

**i** *In case you didn't manage to eliminate the defects, please, refer to the authorized service centre.*



### Environmentally friendly disposal (WEEE)

The packaging, user manual and the device itself shall be taken to the applicable collection point for the recycling of electrical and electronic equipment. Do not throw away the electronic waste to help protect the environment.

Old appliances must not be disposed with other household waste but must be collected separately. Municipal disposal of recyclable wastes is free of charge. The owners of old appliances are required to bring it to a waste facility centre. With this little extra effort, you can help to ensure that valuable raw materials are recycled and pollutants are treated as appropriate.

This appliance is labelled in accordance with European Directive 2012/19/EU - concerning used electrical and electronic appliances (waste electrical and electronic equipment WEEE).

The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Manufacturer: "Power Point Inc Limited" №1202 Hai Yun Ge (B1) Lin Hai Shan Zhuang Xiameilin Futian Shenzhen. China. 518049. Under license of REDMOND®

Изготовитель: «Пауэр Пойнт Инк. Лимитед» №1202 Хай Юн Гэ (B1) Лин Хай Шан Чжуан Сямейлин Футьян, Шеньжень, Китай, 518049. По лицензии REDMOND®

Виробник: «Пауэр Пойнт Инк. Лімітед» № 1202 Хай Юн Ге (B1) Лін Хай Шан Чжуан Сямейлін Футьян, Шеньжень, Китай, 518049. За ліцензією REDMOND®

**Importer (EU):** SIA "SPILVA TRADING" Address: Jelgava, Meiju cels 43 – 62, LV-3007 Reg. Nr. 43603078598. **BA** Uvoznik i distributer za Bosnu i Hercegovinu: ASBIS d.o.o., Džemala Bijedića 162, 71 000, Sarajevo, Bosna i Hercegovina. Tel: +387 35 770 200, e-mail: prodaja@asbis.ba, www.asbis.ba. **BG** Вносител: АСБИС България ЕООД И.Н.: BG121655056 Адрес: София, бул. Искърско шосе 7, ТЦ Европа, срп. 3. Тел.: 02/4284111, www.asbis.bg. **CZ** Dovožce: ASBIS CZ spol. s r.o. Obchodní 103, 251 01 Cestlice, Praha – východ, Praha, Czech Republic. Tel: +420 272 117 111, www.asbis.cz. **HU** Importör: ASBIS Magyarország Kft., H-1135, Budapest, Reitter Ferenc utca 46-48. Tel: +36 1 236-1000, Fax: +36 1 236-1010, www.asbis.hu. **PL** ASBIS POLAND SP Z O.O., Ul. Krasnowolska 17 A, 02-849, Warszawa. Tel +48 22 33 71 510, www.asbis.pl. **RO** Importator: ASBIS Romania SRL, Splaiul Independentei 319, SEMA PARC, Obiectiv 5, Etaj 2, Sector 6, Bucuresti, 062650, Romania. Tel. +40 21 337 1099, www.asbis.ro. **RU** Импортёр в России: ООО «ИЛОТ», 198099, г. Санкт-Петербург, ул. Промышленная, д. 38, к. 2, лит. А, тел.: +7(812) 740-16-30. **SK** Importér/distribútor pre SR: ASBIS SK spol. s r.o., Tuňovská 33, 831 06, Bratislava. Tel: +440-2-32165111, www.online.asbis.sk. **RS** Uvoznik i servis za Republiku Srbiju: ASBIS d.o.o., Cara Dušana 205A, 11080 Zemun, Beograd. Tel: +381 11 310 77 00, www.asbis.rs. **LV** Izplatītājs: SIA „ASBIS BALTICS”- Latvia, Rīga, Vaučkas iela 58A-15, LV-1004; Tel: +371 66047820, e-mail: sales@asbis.lv, www.asbis.lv. **UA** Імпортер в Україні: ТОВ ПІІ «АСБІС-УКРАЇНА», 03061, м. Київ, вул. Газова, будинок 30. Тел. +38 044 455 44 11, www.asbis.ua. **SL** Distributer, dajalec garancije in servis za Slovenijo, Asbis d.o.o., Brodišče 15, 1236 Trzin; Tel: + 386 (0) 590 79 927; e-mail: infosales@asbis.si; www.asbis.si. **HR** ASBIS-CR d.o.o.; Slavenska avenija, 24/6 -1 kat; 10000, Zagreb, Croatia; Tel: + 385 1 600 9900, e-mail: prodaja@asbis.hr; www.asbis.hr. **EE** Maaletooja: SIA „ASBIS BALTICS”- Türi 10c, 11313, Tallinn, Estonia; Tel.: + 372 66047815, e-mail: sales@asbis.ee; www.asbis.ee. **LT** Importuotojas: SIA „ASBIS BALTICS”; Ateities g. 25B, 06326, Vilnius, Lietuva; Tel.: +370 66047814, e-mail: sales@asbis.lt; www.asbis.lt. **CY** Importer Cyprus: ASBIS Kypros Limited; 26, Spyrou Kyprianou Str, 4040, Germasogeia, Limassol, Cyprus. Tel: +357 25 257 350; Fax: +357 25 322 432, e-mail: info@asbis.com.cy; www.asbis.com.cy

[www.redmond.company](http://www.redmond.company)  
[www.multivarka.pro](http://www.multivarka.pro)  
[www.store.redmond.company](http://www.store.redmond.company)  
[www.smartredmond.com](http://www.smartredmond.com)  
Made in China

RMB-M603-ENG-UM-1