

REDMOND

Slow Juicer

RJ-916



User manual

Manufacturer: "Power Point Inc Limited" №1202 Hai Yun Ge (B1) Lin Hai Shan Zhuang Xiameilin Futian Shenzhen, China. 518049. Under license of REDMOND®

Изготовитель: «Пауэр Пойнт Инк. Лимитед» №1202 Хай Юн Гэ (B1) Лин Хай Шан Чжуан Сямейлин Футьян, Шеньжень, Китай, 518049. По лицензии REDMOND®


Виробник: «Пауер Пойнт Инк. Лимітед» № 1202 Хай Юн Ге (B1) Лин Хай Шан Чжуан Сямейлин Футьян, Шеньжень, Китай, 518049. За ліцензією REDMOND®

Importer (EU): SIA "SPILVA TRADING" Address: Jelgava, Meiju cels 43 – 62, LV-3007 Reg. Nr. 43603078598. **BA** Uvoznik i distributer za Bosnu i Hercegovinu: ASBIS d.o.o., Džemala Bijedića 162, 71 000, Sarajevo, Bosna i Hercegovina. Tel: +387 33 770 200, e-mail: prodaja@asbis.ba, www.asbis.ba. **BG** Вносител: АСБИС България ЕООД И.Н.: BG121655056 Адрес: София, бул. Искърско шосе 7, ТЦ Европа, сгр. 3. Тел.: 02/4284111, www.asbis.bg. **CZ** Dovoze: ASBIS CZ spol. s r.o Obchodní 103, 251 01 Čestlice, Praha – východ, Praha, Czech Republic. Tel: +420 272 117 111, www.asbis.cz. **HU** Importőr: ASBIS Magyarország Kft., H-1135, Budapest, Reitter Ferenc utca 46-48. Tel.: +36 1 236-1000, Fax: +36 1 236-1010, www.asbis.hu. **PL** ASBIS POLAND SP Z O.O., Ul. Krasnowolska 17 A, 02-849, Warszawa. Tel +48 22 33 71 510, www.asbis.pl. **RO** Importator: ASBIS Romania SRL, Splaiul Independentei 319, SEMA PARC, Obiectiv 5, Etaj 2, Sector 6, Bucuresti, 062650, Romania. Tel +40 21 337 1099, www.asbis.ro. **RU** Импортёр в России: ООО «ИЛОТ», 198099, г. Санкт-Петербург, ул. Промышленная, д. 38, к. 2, лит. А, тел.: +7(812) 740-16-30. **SK** Importér/distribútor pre SR: ASBIS SK spol. s r.o., Tuhovská 33, 831 06, Bratislava. Tel: +440-2-32165111, www.online.asbis.sk. **RS** Uvoznik i servis za Republiku Srbiju: ASBIS d.o.o., Cara Dušana 205A, 11080 Zemun, Beograd. Tel: +381 11 310 77 00, www.asbis.rs. **LV** Izplatītājs: SIA „ASBIS BALTICS”; Latvia, Riga, Bauskas iela 58A-15, LV-1004; Tel.: +371 66047820, e-mail: sales@asbis.lv, www.asbis.lv. **UA** Імпортер в Україні: ТОВ ПІІ «АСБІС-УКРАЇНА», 03061, м. Київ, вул. Газова, будинок 30. Тел. +38 044 455 44 11, www.asbis.ua. **SI** Distributer, dajalec garancije in servis za Slovenijo, Asbis d.o.o., Brodišče 15, 1236 Trzin; Tel: + 386 (0) 590 79 927; e-mail: infosales@asbis.si; www.asbis.si. **HR** ASBIS-CR d.o.o.; Slavonska avenija, 24/6 -1 kat; 10000, Zagreb, Croatia; Tel: + 385 1 600 9900, e-mail: prodaja@asbis.hr; www.asbis.hr. **EE** Maaletooja: SIA „ASBIS BALTICS”; Türi 10c, 11313, Tallinn, Estonia; Tel.: + 372 66047815, e-mail: sales@asbis.ee; www.asbis.ee. **LT** Importuotojas: SIA „ASBIS BALTICS”; Ateities g. 25B, 06326, Vilnius, Lietuva; Tel.: +370 66047814, e-mail: sales@asbis.lt; www.asbis.lt. **CY** Importer Cyprus: ASBIS Kypros Limited; 26, Spyrou Kyprianou Str, 4040, Germasogeia, Limassol, Cyprus. Tel: +357 25 257 350; Fax: +357 25 322 432, e-mail: info@asbis.com.cy; www.asbis.com.cy




CONTENTS

IMPORTANT SAFEGUARDS.....	5
Technical specifications	7
Delivery set	7
Parts list.....	7
I. PRIOR TO THE FIRST USE.....	7
II. OPERATION	8
Assembly	8
Operation	8
Protection system	9
III. CLEANING AND MAINTENANCE	9
Storage and transportation	10
IV. BEFORE CONTACTING SERVICE CENTER.....	10


A1

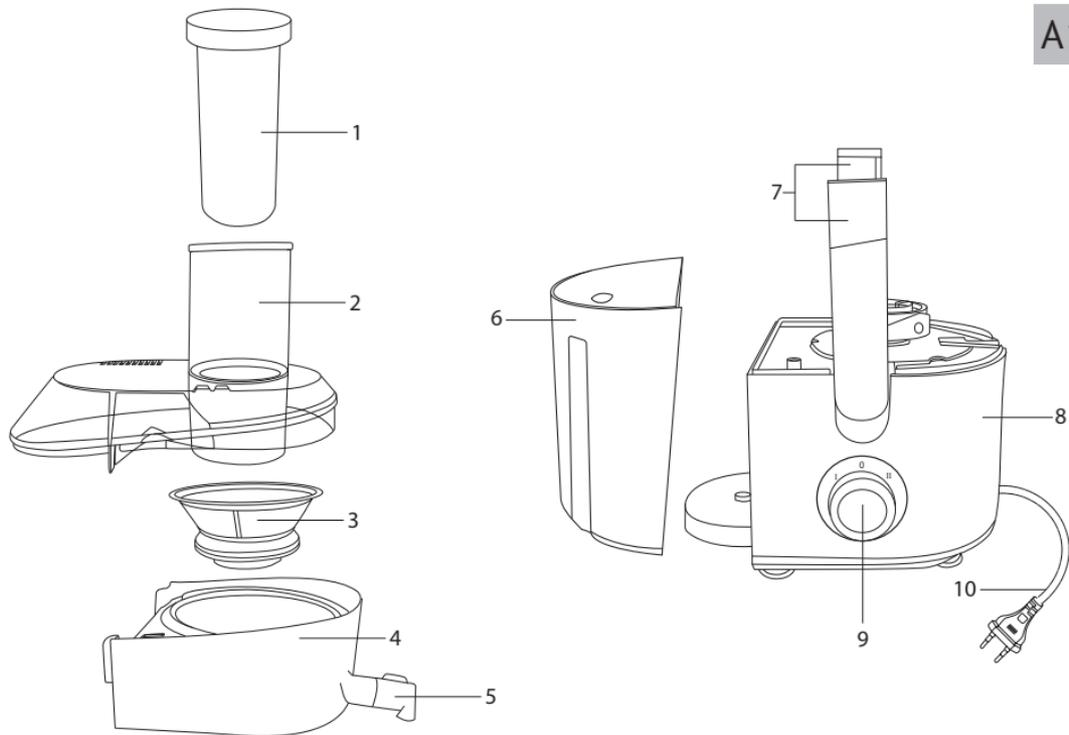


A2

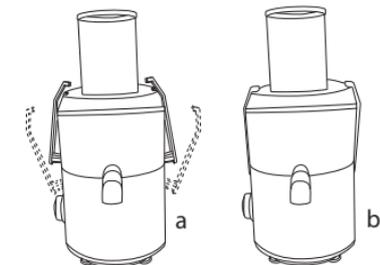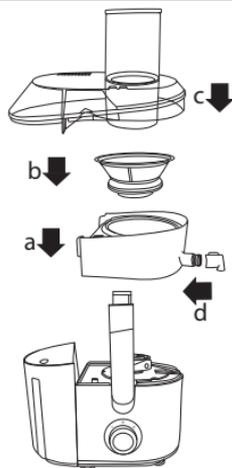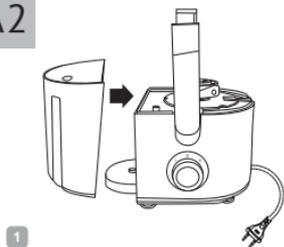


3

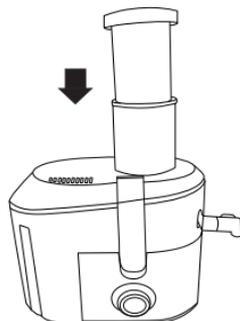

4

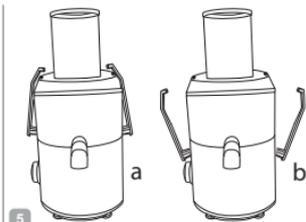

5

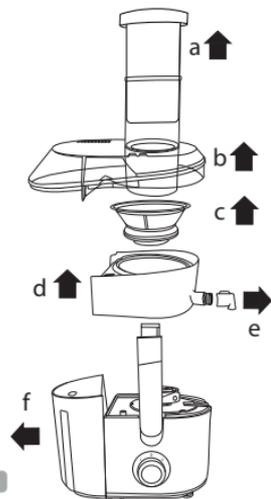

6



Read the user manual carefully and keep it as a reference book. Proper use of the appliance will significantly prolong its life.

The safety measures and instructions contained in this manual do not cover all possible situations that may arise during the operation of the appliance. When operating the device the user should be guided by common sense, be cautious and attentive.

IMPORTANT SAFEGUARDS

- The manufacturer is not responsible for any failures arising from the use of this product in a manner inconsistent with the technical or safety standards.
- This appliance is intended to be used for non-industrial use in household and similar spheres of application. Industrial application or any other misuse will be regarded as violation of proper service conditions. Should this happen, manufacturer is not responsible for possible consequences.
- Before installing the appliance, check that the device voltage corresponds with the supply voltage in your home (refer to rating plate or technical data).
- While using the extension cord, make sure that its voltage is the same as specified on the device. Using

different voltage may result in a fire or other accident, causing appliance damage or short circuit.

- Always unplug the device after use, before cleaning or moving. Never handle the plug with wet hands. Do not pull the power cord to disconnect from the outlet; instead, grasp the plug and pull to disconnect.
- Keep the power cord away from hot surfaces (gas or electric ovens) or sharp edges. Do not let the cord hang over the edge of a table or a counter.

STOP

REMEMBER: damaging the cord may lead to a failure that will not be covered by the warranty. If the cable is damaged or requires replacement, contact an authorized service centre only to avoid all risks.

- Never place the device on soft surfaces.
- Do not use the juicer disassembled. The juicer lid must be securely fastened with clamps. Otherwise, the juicer will not work.

REDMOND

- Do not put too much food into the feeding tube. Do not apply excessive force. The juicer has overload protection system.

STOP

Do not push food into the feeding tube port with fingers or foreign objects as this can cause injuries or breakdown. Use pusher that come with the appliance. Do not touch the blades located on the filter mesh. They are very sharp!

- Before cleaning the appliance ensure that it is unplugged and has cooled down, rotation has stopped. Keep the device clean. Follow the instructions carefully.

STOP

DO NOT immerse the device in water or wash it under running water!

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the

appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children without supervision.

- Keep the packaging (film, foam plastic and other) out of reach of children as they may choke on them.
- No modifications or adjustments to the product are allowed. All the repairs should be carried out by an authorized service center. Failure to do so may result in device and property damage or injury.

STOP

CAUTION! Do not use the appliance in case of any malfunctions.

Technical specifications

Model.....	RJ-916
Type.....	centrifugal
Rated power	400 W
Max. power	750 W
Voltage	220–240 V, 50/60 Hz
Electric safety.....	class II
Number of available speeds	2
Speed I	15,500 rpm
Speed II	19,000 rpm
Noise level	<78 dB
Suction leg	available
Waste container volume	2.2 l
Separator with stainless steel mesh	available
Diameter of the opening for products loading	74 mm
Protection mechanism to prevent switching the device if incorrectly assembled	available
Overheat protection	available
Housing material	plastic
Overall dimensions	345 × 390 × 175 mm
Net weight	2.7 kg
Power cord length	1 m

Delivery set

Juicer.....	1 pc.
Plunger.....	1 pc.
Waste container.....	1 pc.
User manual	1 pc.

Service book..... 1 pc.

The manufacturer has the right to make changes in the design, configuration or package, as well as in the technical characteristics of the product in the course of continuous improvement of its products without further notice of these changes. The specifications allow the error of ±10%.

Parts list (scheme A1, p. 3)

1. Plunger
2. Lid with an food supply chamber
3. Separator
4. Processing chamber
5. Juice pouring spout
6. Waste container
7. Lid clamps
8. Juicer base with the motor
9. Speed switch
10. Power cord

I. PRIOR TO THE FIRST USE

Carefully take out the appliance and its components from the box. Remove all the packaging materials and promotional stickers.



Be sure to keep in place warning labels, index stickers (if any) and a label with the serial number of the appliance on its body!

After the transportation or storage at low temperatures, it is necessary to keep the appliance at the room temperature for at least 2 hours before switching on.

Completely unwind the power cord. Wipe the housing with a moist cloth. Rinse removable parts with warm soapy water and dry thoroughly before connecting the appliance to an electrical outlet.

II. OPERATION

Assembly (scheme **A2**, p. 4)

1. Place the juicer base on a flat, hard, horizontal surface. Make sure that the appliance is unplugged from the mains and the speed switch is in position 0.
2. Place the waste container on the base.
3. Place the processing chamber on the base so that the edge of the waste container is secured in the special tab of the processing chamber.
4. Place the separator into the center of the processing chamber on the drive shaft coupling. Press on the upper rim of the separator from both sides so that it lowers onto the coupling until it stops. Make sure the separator is secured to the shaft evenly and firmly. Do not apply excessive force!
5. Place the lid with the food supply chamber on the processing chamber. Install the juice pouring spout.
6. Raise the clamps, latch them onto the plastic tabs on the lid, and snap them into place by applying slight pressure to their bottom.



CAUTION! The lid clamps must be fully latched and tightly secured to the tabs on the lid.

Operation



CAUTION! The recommended time for juicer continuous operation at maximum speed when processing solid products should not exceed 1 minute with a break of at least 3 minutes. The appliance may only be operated fully assembled.

1. Wash fruits and vegetables before juicing, cut into pieces the largest ones that do not fit into the food supply chamber. When juicing plums, peaches and other fruits with large pits, remove the pits first to avoid damaging the separator. Remove thick or tough skin from fruit (kiwi, mango, etc.) before juicing.
 2. Place the juicer on a flat, hard, horizontal surface. Make sure that the juicer is properly assembled (see the "Assembly" section), the appliance is unplugged, the speed selector is in position 0, the food supply chamber is empty.
 3. Place a container under the juice pouring spout.
 4. Connect the juicer to the mains.
 5. Move the speed selector to position I. The motor starts running. Use this speed setting for juicing berries, soft fruits and vegetables.
 6. To extract juice from hard fruits and vegetables, move the speed selector to position II.
- STOP** Do not turn the speed selector further than the limit positions to avoid mechanical damage!
7. Load prepared fruits and vegetables into the food supply chamber. Use the plunger to push them through.



CAUTION! Load products into the juicer only while the motor is running.

Do not use hands or foreign objects to push the products. Do not put foreign objects into the food supply chamber.

Do not press too hard on the plunger. This may affect the quality of the juice and lead to the separator malfunction or damage components of the appliance.

8. If the waste container becomes full during operation, it must be emptied. To do this, turn off the appliance by moving the speed selector to position 0 and disconnecting the appliance from the mains. Follow the instructions in the "Cleaning and Maintenance" Section.
9. When you finish, turn off the juicer by moving the speed selector to position 0 and unplug it from the mains.



To increase the appliance efficiency, it is recommended to make short breaks to clean the separator. Rinse the separator after processing 1.5–2 kg of food. When processing berries (e.g. grapes, currants, gooseberries), the separator becomes clogged faster than usual. Pressing juice from these products may require more frequent cleaning of the juicer and separator.

Soft apple varieties, as well as overripe apples, are not intended for juice production. When pressing ones, a large amount of waste is generated that clogs the tray of the processing chamber. Disruption occurs while the juicer is running; pulp should be cleaned from the processing chamber more often.

MANUFACTURER'S WARNING!

To improve the productivity and prolong service life it is recommended:

- To cut firm products, as carrots, beets, radish, apples, pears, pineapple into 4–5 cm wedges;

- To gradually put the precut vegetables, fruit or berries into the feed chute and slightly press;
- Not to press the push bar too much to avoid quality degradation of juice and the auger rotation stopping;
- To remove stones from fruit and berries to avoid auger and filter breakage;
- To preliminarily defrost food.



CAUTION! This device IS NOT AIMED at squeezing the juice from beans, nuts, fruit/vegetable stones, frozen foods!

Protection system

- The appliance is equipped with activation protection against incorrect assembly. If the separator bowl or the appliance lid is not installed or installed incorrectly, the appliance will not switch on.
- The appliance is equipped with a motor overheat protection system. If the temperature is too high, power will be switched off automatically. In this case, turn off the juicer by setting the speed switch to position 0 and disconnecting the appliance from the mains. The motor will have cooled down after 20–30 minutes and you may continue using the appliance, but with shorter periods of continuous use and increasing the intervals between use.

III. CLEANING AND MAINTENANCE

The juicer must be cleaned after each use. See diagram **A2**, page 4 for disassembly procedure.

REDMOND

1. Turn off the juicer. Make sure it is disconnected from the mains and the speed switch is in position 0.
2. Pull the lower part of the clamps and remove them from the lid. Remove the lid.
3. Take away the separator by gently pulling it up on the edges. Do not apply excessive force. Soak the separator in water and detergent for 10 minutes, then rinse it.
4. Remove the processing chamber and the waste container. Wash them with the plunger and the lid, using non-abrasive detergents.



DO NOT immerse the housing and power cord into water or rinse it under running water.

DO NOT use coarse tissues or sponges, abrasive pastes for cleaning. It is also not recommended to use any chemically aggressive or other substances, not recommended for use with items which contact with food.



Add some lemon juice to clean and shine metal parts.

5. Wipe the housing of the appliance with a damp cloth.

Storage and transportation

Before repeated operation or storage completely dry all parts of the appliance. Store the assembled appliance in a dry, ventilated place away from heating appliances and direct sunlight.

During transportation and storage, do not expose the device to mechanical stress, that may lead to damage of the device and/or violation of the package integrity.

Keep the device package away from water and other liquids.

IV. BEFORE CONTACTING SERVICE CENTER

Problem	Possible cause	Solution
Appliance won't switch on	Appliance is not plugged in	Plug in the appliance
	Electrical socket is not powered	Connect the appliance to a properly working electrical socket
	Clamps are not closed	After turning off the appliance, close the clamps
Motor stops while operating	Overheating protection tripped	Follow the instructions in the "Protection system" section
	Waste is accumulated in the processing chamber due to excessive rotation speed	Clean the processing chamber, reduce the rotation speed
	Waste is accumulated in the processing chamber due to excessive pressure on the plunger	Clean the processing chamber; do not overload the food supply chamber with products; reduce the force when pressing the plunger.
Pulp is accumulated on the separator mesh or gets into the waste container with a lot of juice.	Separator is clogged	Clean the separator (see "Cleaning and Maintenance" section)
Juice gets out under too much pressure or leaks out of the lid	The rotation speed you have selected is too high	Reduce the rotation speed
	You apply excessive force when using the plunger	Reduce the force when using the plunger
Strong vibration of the appliance during operation	Separator is damaged	Check the separator for cracks or other damage; if any, contact the service center

i *In case you didn't manage to eliminate the defects, please, refer to the authorized service centre.*



Environmentally friendly disposal (WEEE)

The packaging, user manual and the device itself shall be taken to the applicable collection point for the recycling of electrical and electronic equipment. Do not throw away the electronic waste to help protect the environment.

Old appliances must not be disposed with other household waste but must be collected separately. Municipal disposal of recyclable wastes is free of charge. The owners of old appliances are required to bring it to a waste facility centre. With this little extra effort, you can help to ensure that valuable raw materials are recycled and pollutants are treated as appropriate.

This appliance is labelled in accordance with European Directive 2012/19/EU – concerning used electrical and electronic appliances (waste electrical and electronic equipment WEEE).

The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

www.redmond.company
www.multivarka.pro
www.store.redmond.company
www.smartredmond.com
Made in China

RJ-916-ENG-UM-1